



**TREK**

Trek Bicycle Corporation, P.O. Box 183, 801 W. Madison St., Waterloo, WI 53594

R A C I N G   S P O R T   T O U R I N G

**OWNER'S MANUAL**

# Congratulations

Congratulations on choosing a Trek. Every effort has been made to ensure that your selection is the proper design and size for your special requirements. Your bicycle has been carefully constructed, assembled, and adjusted so that its safety and performance meet the highest standards. We encourage you to read this manual thoroughly, giving special attention to the cautions for your personal safety. Your understanding of the operation and maintenance of your bike is your key to keeping it in top condition. This manual is designed to help you

develop such an understanding. We do encourage you, however, to contact your Trek dealer if you have any questions concerning your new bicycle.

We have included a customer survey with the registration card you will need to fill out; your care in completing the survey will be of value to us in serving you and our other customers in the future. Comments and suggestions are always welcome. We're certain you'll enjoy your new bicycle—thank you for selecting Trek.

Your bicycle is a Creme Trek 2000 58 2000  
Color Size Model No.  
Your Serial Number is Smooth Feed Sheets™  
Your Trek dealer is \_\_\_\_\_


# Contents

<b>YOUR TREK BICYCLE</b> .....	2	<b>APPENDIX</b> .....	39
<b>BEFORE YOU RIDE</b> .....	4	<i>Clincher Tire Repair/</i>	
<b>COMPONENT SYSTEMS</b> .....	8	<i>Replacement</i> .....	39
<i>Saddle and Seatpost</i> .....	8	<i>Mounting Sew-up Tires</i> .....	40
<i>Handlebars and Stem</i> .....	10	<i>The Freewheel</i> .....	41
<i>The Drivetrain</i> .....	13	<i>Bearing Adjustment</i> .....	43
<i>The Derailleur System</i> .....	16	<i>Gear Chart</i> .....	47
<i>The Brake System</i> .....	24	<b>YOUR TREK FRAME</b> .....	48
<i>Wheels and Tires</i> .....	28	<b>WARRANTY</b> .....	49
<b>BICYCLE CARE</b> .....	34		
<b>BONDED FRAMESETS</b> .....	37		



# Your Trek Bicycle

- (A) Saddle
- (B) Seatpost
- (C) Rear brake
- (D) Freewheel
- (E) Rear derailleur
- (F) Chain
- (G) Front derailleur
- (H) Crankset
- (I) Pedal
- (J) Toeclip
- (K) Stem
- (L) Handlebars
- (M) Brake lever
- (N) Shift levers
- (O) Front brake
- (P) Tire
- (Q) Rim
- (R) Hub
- (S) Valve stem
- (T) Reflector

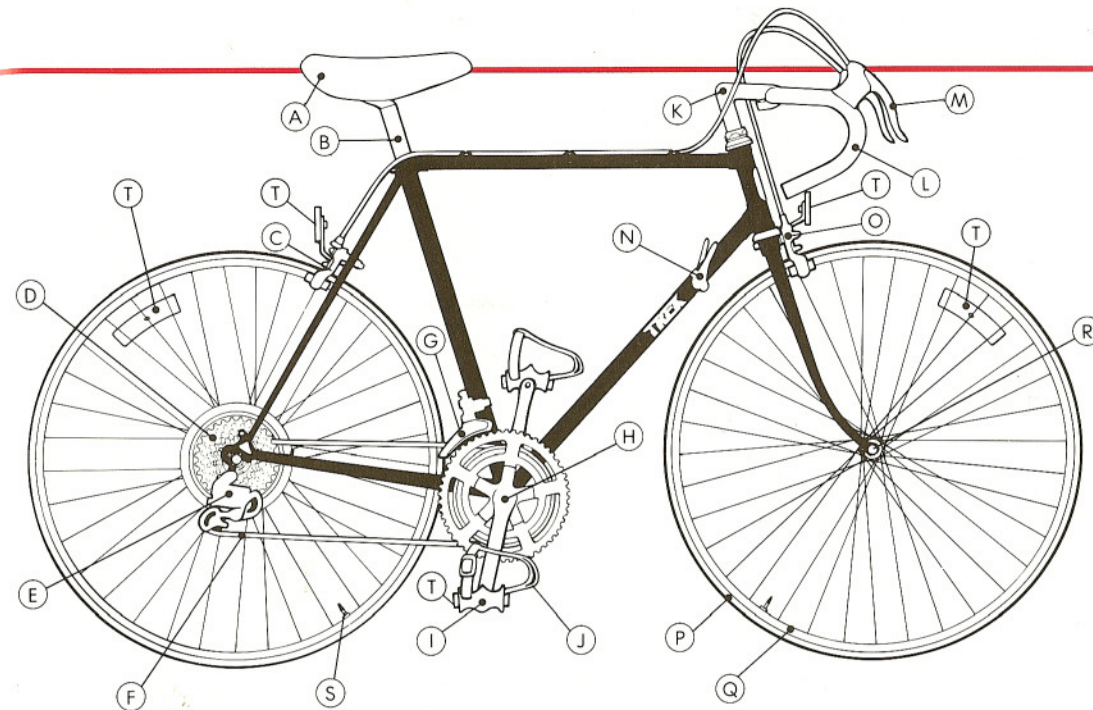

# Before You Ride

Because a bicycle is smaller and less powerful than other vehicles, safety cannot be overemphasized. Here are suggestions that will help you ride your bike as safely as possible. Trek recommends that you always wear a helmet while bicycling.

## Make Sure Your Bicycle Fits You

Your Trek dealer has fit you with the bicycle that will suit your needs best, one that can be ridden safely. **A bicycle is considered unsafe for a particular person to ride if there is less than 1" clearance between the horizontal top tube and the rider when he or she is standing over the bicycle.**

## Know Your Bicycle Riding Laws

Each state and local area has specific laws for cyclists. Local cycling clubs or your state's highway department should

be able to supply this information to you. Using the proper hand signals, riding on the right side of the road (never going against traffic), and always riding in single file are among the more important rules. *Remember:* You are hard to see, and though cycling is becoming more and more prominent, many drivers simply are not trained to recognize the rights and special considerations of a bicycle rider. You *always* should ride your bicycle defensively and predictably.

## The Road Itself Can Be a Hazard

Road conditions and design have improved over the years, but you should always be aware of potential problems. Watch out for potholes, drain grates, soft or low shoulders, and other deviations. When crossing railroad tracks, do so carefully at a 90° angle. If you are not sure of conditions, walk your bike.

# Before You Ride

---

## Parked Vehicles Are Potentially Treacherous

Watch the cars you are preparing to pass. If the car suddenly enters your lane or someone opens a door unexpectedly, you could be involved in a serious accident. You may want to mount a horn or bell on your bicycle for added security in defensive riding.

## Special Riding Situations Demand Special Attention

Remember that the performance of your bicycle will change depending on the many conditions in which you will be riding.

**Night Riding.** **Your Trek is equipped with a full set of reflectors; keep them clean and in position.** As useful as these reflectors are, remember that they do not help you see, nor do they help you be

seen unless light is directed on them. **We strongly recommend that you use a good generator or battery-operated head and taillight assembly to augment the reflectors.** *The important thing is to see and be seen.* A good number of products achieve this; if you do any amount of night riding, visit your dealer to see what's available.

**Wet Weather.** No brakes, whatever their design, work as efficiently in wet weather as they do in dry. Wet weather precautions therefore must be taken. Brakes, even when properly aligned, lubricated, and maintained, require greater lever pressure and longer stopping distances in wet weather. Anticipate the extra time it will take to stop. Also remember that wet weather causes reduced visibility (both yours and



## Before You Ride

motorists') and reduced traction. Use slower cornering when traction is reduced. Wet leaves and manhole covers are other wet weather hazards.

### Check Your Bicycle Visually Every Time You Ride

To make sure your bike is ready to ride, spend a few moments checking its systems according to the checklist that follows. Keep in mind that this is *not* a comprehensive maintenance program. If your bicycle has some problem, or if you suspect it has been disturbed or tampered with, check the entire bicycle carefully or take it to your Trek dealer. If you are not certain as to what constitutes a problem, refer to the appropriate section of the Component Systems chapter. If you spot a problem, do not ride the bike until it has

been corrected. *Remember:* This is not a comprehensive maintenance checklist.

**Tires.** Inflate your tires to the air pressure recommended on the tire sidewalls. Gas station hoses inflate bicycle tires very rapidly, and the pressure they indicate is often inaccurate. We suggest that you use a hand-held or foot pump and an appropriate gauge.

**Wheels.** Spin each wheel to see that it doesn't have flat spots and is centered in the bicycle frame or forks. Then grasp the rim and attempt to move the wheel to the right or left side of the bicycle. Wheels should be fixed and have no side-to-side play. If one or both wheels are not round or in their correct positions, refer to the Wheels and Tires section of the next chapter.

## Before You Ride

**Brakes.** Press each brake lever to make sure that there is no binding and that the brake shoes press hard enough on the rims to stop the bike. There should be no more than a 1/8" clearance between the rim and each shoe. If your brakes are too tight or too loose, an adjustment should be made.

**Hub and Brake Quick Release Levers.** Make sure that all quick release mechanisms are firmly in their closed (locked) positions. **Caution:** Failure to assure that hub quick releases are properly and firmly locked can result in an accident. Be sure that hub quick releases are properly and firmly locked before riding. Seek your dealer's assistance if you have any questions or difficulties with hub quick releases.

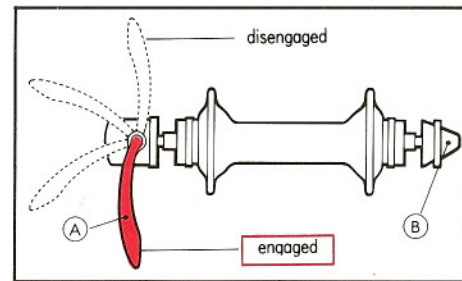


Figure 13. Hub Quick Release

- Ⓐ Skewer lever      Ⓑ Adjusting nut

# Component Systems

## Saddle and Seatpost

### Assembly

To assemble your saddle and seatpost, install saddle runners into slots on seatpost. Place top half of seatpost clamp over runners and tighten with 6 mm hex wrench. Check to be sure the runners are properly engaged in the clamp. Next, grease the seatpost and insert it into the bicycle frame seat tube, making sure the *minimum insertion* mark engraved on the post is inside the seat tube and out of sight. **Caution: Never ride your bicycle with the seatpost raised beyond the minimum insertion mark. A minimum of 2½" must always remain in the seat tube.**

Affix the saddle assembly to the frame by tightening the binder bolt with a 4 mm or 5 mm hex wrench. Make sure that the bolt of

the saddle assembly is neither over—nor under-tightened. You should not be able to move the saddle from side to side or up and down. We recommend that the seatpost clamp bolt be tightened to

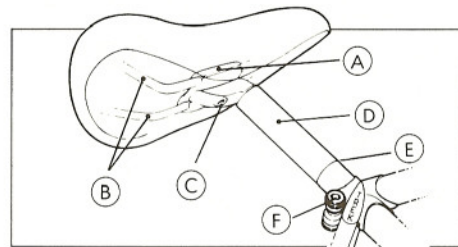


Figure 1. Saddle and Seatpost

- |                |                            |
|----------------|----------------------------|
| (A) Clamp      | (D) Seatpost               |
| (B) Runners    | (E) Minimum insertion mark |
| (C) Clamp bolt | (F) Binder bolt            |

## Component Systems

100 in • lb (inch-pounds) and that the binder bolt be tightened to 80 in • lb. Do not tighten binder bolt if seatpost is not inserted into frame seat tube.

### Position

**Angle.** To adjust the angle of the saddle, you must first loosen the bolt on the seatpost clamp (C). The angle of the top plane of the saddle to the ground is a matter of personal preference; we recommend that you try it either parallel to the ground or tipped slightly to the rear. These positions will transfer weight off your arms and wrists for more comfortable riding. After adjusting the angle of the saddle, retighten the seatpost clamp as described in the Assembly section above.

**Height.** The height of the saddle is very important for riding comfort, safety, and efficiency. To set this position, loosen the binder bolt (F) and position the crankarms so that they are perpendicular to the ground. While someone holds the bicycle up, place yourself on the saddle in riding position, without shoes. Adjust the height of the saddle so that your extended leg is straight when your heel rests on the bottom of pedal. Make sure that the minimum insertion mark remains inside the frame. Never ride the bicycle with the seat raised beyond this height. The correct seat position for you will allow the knee of your extended leg to be bent slightly when you are in a proper riding position with the ball of your foot on the pedal. After adjusting the height of the saddle, retighten the binder bolt as described in the Assembly section.



## Component Systems

### Handlebars and Stem

#### Assembly

Slide the stem onto the handlebars until it is centered and positioned as shown in Figure 2. Tighten the handlebars on the stem with the handlebar clamp bolt (E). Next apply a liberal amount of grease to the lower portion of the stem, expander bolt (A), and wedge. Loosen the expander bolt with a 6 mm hex wrench and insert the handlebar assembly into the fork steerer tube so that the minimum insertion mark is not visible.

**Caution:** Never ride your bicycle with the handlebar stem raised beyond the minimum insertion mark. A minimum of 2 3/4" of the stem always must be inside the fork steerer tube. Once the stem is in place, center it and tighten the expander bolt. The recommended torque for both the handlebar clamp bolt

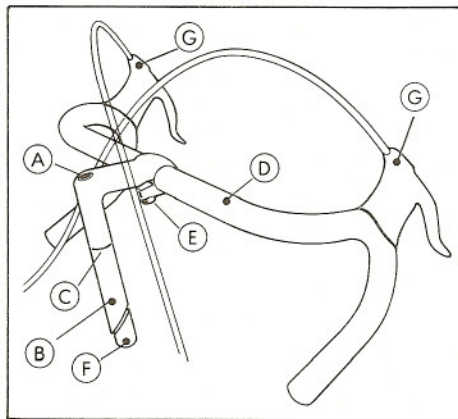


Figure 2. Handlebars and Stem

- |                            |                 |
|----------------------------|-----------------|
| (A) Expander bolt          | (E) Clamp bolt  |
| (B) Stem                   | (F) Wedge       |
| (C) Minimum insertion mark | (G) Brake lever |
| (D) Handlebars             |                 |

## Component Systems

and the expander bolt is 100 in • lb.

**Caution:** Do not over or under tighten handlebar clamp or expander bolt. Test the security of the handlebars within the stem and the stem within the fork steerer tube by attempting to move the handlebars up and down and from side to side with the front wheel locked between your knees. If you are unsure of the safety of your handlebar system, do not ride the bicycle until your Trek dealer has made any necessary adjustments. Do not remove the front reflector.

#### Position

**Angle.** Position the handlebars so that their ends are between parallel with the ground and pointing roughly toward the rear hub. When you adjust the handlebars, keep them centered in the

stem and follow the directions and precautions in the Handlebar Assembly section above.

**Height.** Handlebar height is largely a matter of personal preference, but usually handlebars are level with or slightly below the saddle height. Remember that at least 2 3/4" of the stem must remain in the fork steerer tube to ensure the strength and safety of the fork and stem assembly. Failure to observe this caution could result in bodily injury.

To raise or lower the handlebars, loosen the stem binder bolt (A) two or three turns and then tap it down to loosen the wedge. Use a soft-face hammer or a block of wood to protect the finish. When repositioning the stem, follow the directions outlined in Assembly, with special attention to the precautions.

## Component Systems

Install brake lever on handlebars at the locations shown in Figure 2. Slide clamp band over the handlebars.

Note: Position the levers carefully. If they are mounted too high on the handlebars, you will have trouble reaching them; if they are too low, they will hit the handlebars as you squeeze your brakes, inhibiting effective braking. Also make sure that one lever is not higher or lower than the other. After you have positioned the levers, secure them by tightening the *clamp band screw* inside the lever bodies (see Figure 9). The recommended torque is 60 in • lb.

When brake lever installation is complete, wrap the handlebars with handlebar tape. You'll need two rolls.

Start wrapping cloth tape at the openings of the handlebar ends towards

the frame. After tape has been started, insert plugs into the handlebars to hold the tape. Continue to wrap handlebars and around lever clamps.

After you have finished wrapping the handlebars with cloth tape, use plastic electrical tape to secure ends of the cloth tape.

## Component Systems

### The Drivetrain

The drivetrain refers to parts of the bicycle that transmit power to the rear wheel. The system includes the pedal and toeclip assembly, crankset, chain, and freewheel (see Figure 3). When the components of this system are working together properly, shifting will be easy, your bike will be quiet, and its efficiency can reach its maximum. The discussion of function and basic maintenance that follows will help you keep your bicycle running smoothly. For more information about the drivetrain, refer to the Appendix or contact your Trek dealer.

#### Pedals and Toeclips

**Assembly.** Each pedal is stamped *R* or *L* on one of the flat sides of the pedal spindle. Apply grease to the pedal threads and screw the pedal marked *R*

clockwise into the crankarm on the right side of the bicycle. Screw the other pedal counterclockwise into the crankarm on the left side of the bicycle. Be careful not

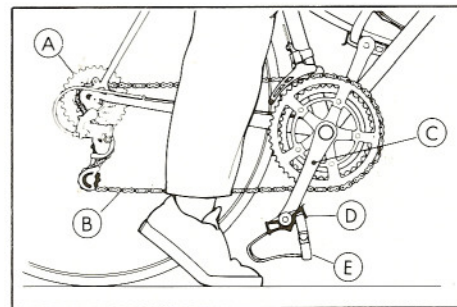


Figure 3. The Drivetrain

- |               |                      |
|---------------|----------------------|
| (A) Freewheel | (D) Pedal            |
| (B) Chain     | (E) Toeclip assembly |
| (C) Crankset  |                      |



## Component Systems

---

to confuse the two pedals; damage to both pedal threads and the crankarms can result. Tighten both pedals securely - we recommend a torque of 350 in • lb.

Attach each toeclip to a pedal with the bolts that are integral parts of the pedal reflectors. Sandwich the toeclip between the pedal surface and the reflector and fasten it to the pedal with the lock washers and nuts. Feed each toeclip strap through the pedal slots, then through the slot in the toeclip cage. Buckle the strap. **Do not remove the pedal reflectors.**

**Operation.** Getting on and off a bicycle equipped with toeclips is a little tricky at first, but with just a little practice it becomes extremely easy. First straddle the bike with both feet flat on the ground. Position the left pedal up toward the handlebars. After making sure that both toestraps are open wide enough to accept

your shoes, place your left foot in the left clip, push forward, and mount the saddle. Flip the right toeclip rightside up by drawing your foot across the small tab on the bottom of the cage and place your right foot in the right clip. As you pedal along, reach down and tighten the straps.

Toeclips will increase your efficiency and power a great deal because you are able to pull up on the toeclips as well as push down on the pedals. They also prevent your feet from slipping off the pedals when they are wet or when you apply a great deal of pressure. Although toeclips are an accessory, we highly recommend them. **Caution: Always remember to release the straps and remove feet before coming to a complete stop.**

## Component Systems

---

### The Crankset

**Function.** The crankset includes the left and right crankarms, the bottom bracket set (spindle and bearing assembly), and the chainrings. Your bicycle is equipped with either two or three chainrings, depending on the model. The number of teeth on the chainrings has been chosen according to the type of riding for which your particular model was designed. Optimal gearing has been supplied on your Trek. If you would like to revise the gearing provided on your bicycle, the chainrings can be changed, as can the cogs on the freewheel; refer to the Gear Chart in the Appendix.

**Inspection.** Periodically check the teeth on each chainring for excessive oil buildup and bent or broken teeth. These problems can make shifting noisy and

ineffective or cause the chain to fall off. Also check the tightness of the *crankarm fixing bolts* from time to time. Remove the dustcover and tighten the crankarms with the correct socket wrench (14 or 15 mm). The recommended torque is 220 in • lb. Finally, check the side-to-side play in the crank. Take the chain off the chainrings, place your hand on each crankarm, and pull to the left and right of the bicycle. There should be no visible rocking motion. If there is, the bearings are too loose. Next, spin the crank. If the motion stops abruptly, the bearings are too tight. If the crank is either too loose or too tight, refer to the Bearing Adjustment section of the Appendix.

### The Chain

**Cleaning and Lubrication.** Keep the chain as free of dirt as possible. After cleaning with a brush and kerosene (do

## Component Systems

not use gasoline), or specially made cleaning kit, allow the chain to air dry and then apply the proper bicycle oil. Keep in mind that excessive oil on the chain will attract more dirt. Take the extra time to apply oil only to the pivot points of each link.

### The Freewheel

**Cleaning.** Just like the chain, the freewheel should be kept as clean as possible. Remove the surface dirt that gathers around the cog teeth with chain cleaner or kerosene and a brush. Do *not* use gasoline. To clean and lubricate the bearings, you'll have to remove the freewheel unit from the hub. Directions for this operation are included in the Appendix.

## The Derailleur System

### Function and Operation

The word *derailleur* refers to the derailing or shifting of the chain from one sprocket to another. The derailleur system includes the front and rear derailleurs, the shift levers, and the cables (Figures 4 through 7). A variety of gear ratios allows you to maintain a constant rate of pedal revolutions in spite of changes in terrain, weather, and your physical condition.

When shifting gears on a bicycle, plan ahead—you can shift gears only while the pedals and chain are moving forward. Never attempt to shift gears when stopped or when back pedalling. When you shift, reduce your pressure on the pedals; excessive chain tension makes shifting difficult. Avoid shifting when going over railroad tracks or other bumpy surfaces,

## Component Systems

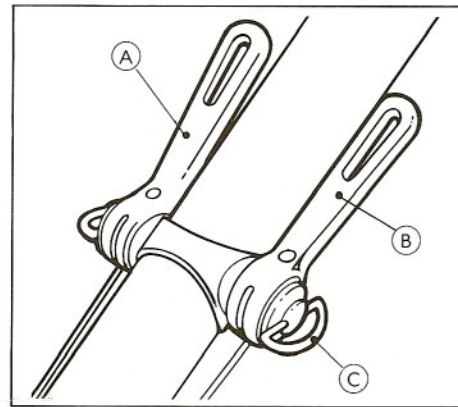


Figure 4. Shift Levers

- (A) Front derailleur lever  
(B) Rear derailleur lever

- (C) Friction screw

or the chain may not shift properly and may come off.

The gear shift levers, Figure 4, are operated by fingertip control. The left-hand lever controls the front derailleur and the right-hand lever controls the rear derailleur. Shift only one lever at a time. Choose the gear combination most comfortable for the road conditions, and you should be able to maintain a constant rate of pedalling. It is not essential that various gear combinations be used in sequence.

Listen to your bike. A properly adjusted drivetrain and derailleur system is *quiet*. If an unusual noise accompanies or follows any shift, try moving the levers slightly; you will soon learn to make fine adjustments while riding along. If the noise persists or grows louder, stop the bicycle and try to locate the noise. If



## Component Systems

necessary, ask your Trek dealer to identify and correct any problems. Most new Trek bicycles are equipped with indexed shifting systems. These are designed to reduce or eliminate shifting related noise when properly adjusted and used. See your Trek dealer for specific adjustment and operating instructions for indexed shifting system.

### Adjustment

If shifting is sluggish or difficult, if you hear a rubbing or grinding noise, or if the chain rubs on any part of the bicycle or falls off during or after a shift, check the adjustment of the derailleurs. The rear derailleur (Figure 5) should be checked and adjusted first because the front derailleur (Figure 7) cannot be aligned if the rear mechanism is out of adjustment.

**Rear Derailleur.** To make the high gear adjustment on the rear derailleur, first

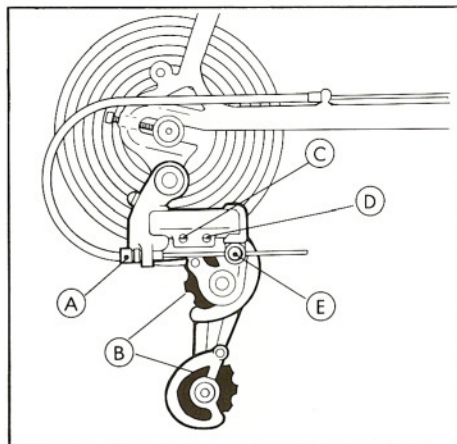


Figure 5. Rear Derailleur

- |                              |                               |
|------------------------------|-------------------------------|
| (A) Adjusting barrel         | (D) High gear adjusting screw |
| (B) Derailleur pulleys       | (E) Cable clamp bolt          |
| (C) Low gear adjusting screw |                               |

## Component Systems

shift the chain onto the smallest rear sprocket and the smallest front chainring, then loosen the *cable clamp bolt* until the cable is free. Once this is done, stand behind the bicycle to see that the smallest rear sprocket, the chain, and the two derailleur pulleys are in line (see Figure 6). If they aren't aligned, turn the *high gear adjusting screw* until this line is established. Next, move the right-hand shift lever to its most forward position and screw the adjusting barrel all the way in (not all models have an adjusting barrel). Pull the cable taut and tighten the cable clamp bolt to approximately 30 in • lb. Be careful not to over—or undertighten—bolt damage or cable slippage can result.

To make the low gear adjustment, first turn the *low gear adjusting screw* far enough counterclockwise so that it will not restrict the movement of the derailleur. Then *carefully* shift the chain onto the largest rear sprocket. Do not

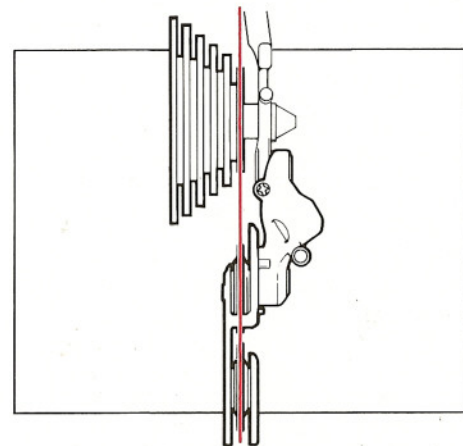


Figure 6. Rear Derailleur Alignment

When adjusting rear derailleur, pulleys should be on same plane as the smallest freewheel sprocket.

## Component Systems

overshift or the chain will wedge between that gear and the wheel. Once you are in the low gear, move the right-hand shift lever until the two derailleur pulleys and the chain are in line with that gear. Turn the low gear adjusting screw clockwise until it meets resistance. (If you have turned it too far, the derailleur will move toward the outside of the bicycle.)


**Indexed Derailleur Adjustment.** Many bicycles are now equipped with indexed derailleurs. These "click" shifters are known by several brand names, Shimano S.I.S., and SunTour Accushift for example.

Indexed derailleurs require precise initial adjustment, and occasional readjustment. This service should be done by your Trek dealer.

Suggested owner maintenance is to keep control cable properly tensioned. Test this adjustment by moving the lever slightly, the derailleur should also move slightly with minimal freeplay in the


20

cable. Excessive freeplay in the cable will not allow the derailleur to index properly. Freeplay can be adjusted out by turning the adjusting barrel in a counter-clockwise manner (Fig. 7). If this is not successful, have your dealer service the cable. When replacing the derailleur cable, be sure to use high quality, low-stretch cables. Also keep the derailleur clean and properly lubricated.

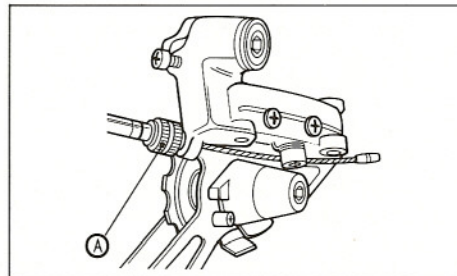

**Figure 7. Indexing Derailleur**  
A Adjusting Barrel

## Component Systems

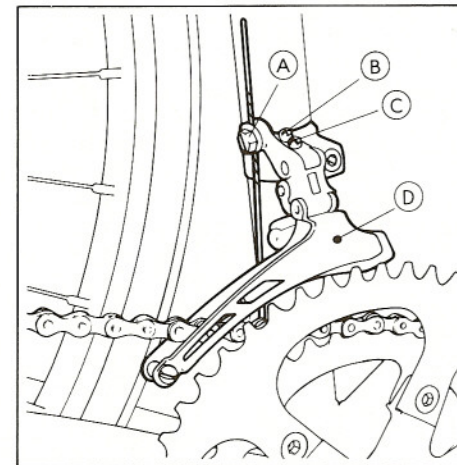

**Figure 7. Front Derailleur**

- |                            |                             |
|----------------------------|-----------------------------|
| A Cable clamp bolt         | C High gear adjusting screw |
| B Low gear adjusting screw | D Chain guide               |

**Front Derailleur.** To adjust your front derailleur (Figure 7), first shift the chain onto the smallest front chainring and the largest rear sprocket. Loosen the cable clamp bolt until the cable is free. Then turn the low gear adjusting screw until the chain is close to, but not touching, the inner chain guide. Move the lever to its most forward position, pull the cable taut, and tighten the cable clamp bolt. Be careful not to under—or overtighten; we recommend tightening to 30 in • lb.

To adjust the derailleur for the outside chainring, shift the rear derailleur to the smallest sprocket. Next, turn the high gear adjusting screw counterclockwise until it cannot interfere with the motion of the derailleur. Shift the chain onto the large outside chainring and position the derailleur so that the chain is close to but not touching the outer chain guide. Retighten the adjusting screw until it meets resistance. Go through the various



## Component Systems

gear combinations. Make sure the chain does not fall off when you shift and that the derailleurs do not rub on any part of the wheel or crankset. Finally, make sure that the cable has not slipped. Note that the outer plate of the derailleur chain guide should clear the top of the outer chain wheel teeth by approximately  $\frac{1}{8}$ " to  $\frac{1}{4}$ ". It should also be parallel with the chain line.

**Shift Levers.** If a shift lever is too tight to move or is so loose that it moves back to the forward position after a shift, then the friction screw needs to be adjusted. See Figure 4.

**Cable Replacement (for cable routed outside chainstay).** If the cable of either derailleur is frayed or rusted, replace it as soon as possible. First shift the derailleurs so that both levers are in their most forward position. Loosen the cable clamp bolt for the derailleur with the bad cable

and feed the cable through the shift lever and off of the bicycle. Notice the path the cable follows as you do this.

Inspect the cable housings to see if they are clean and undamaged. If they are damaged or rusty, replace them as well. If you replace any housings, make sure that the pieces are cut to the proper length (use the old pieces as guides) and that neither end has burrs; the cable should pass freely through these ends.

Grease the new cable and feed it through the lever and all of the cable guides and housings and into the hole in the cable clamp bolt. After you have done this, follow the directions for derailleur adjustment and cut the cables so that no more than 3" of cable length extend beyond the cable clamp bolt. To prevent fraying, crimp on a metal end cap or apply some solder to the end of the cable.

## Component Systems

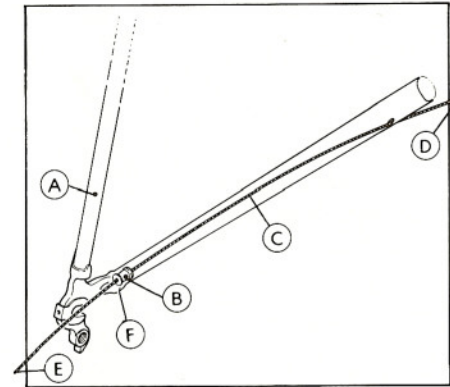


Figure 8. Internal Routed Cable Replacement

- |                   |  |
|-------------------|--|
| (A) Frame         | (D) Leaded cable end                           |
| (B) Hidden funnel | (E) Cable end requires smooth pointed surfaces |
| (C) Cable         | (F) Dropout                                    |

**Cable Replacement (for cable routed inside chainstay).** Remove old cable. Unfasten cable clamp bolt on rear derailleur and pull cable through hole (see Figure 8).

Prepare new cable to slide through hidden funnel at dropout end of the chainstay. Be sure cable end is free from frayed strands. Apply small amount of solder to cable end and hand file to a pointed smooth surface. Use old cable as a guide to cut new cable.

Grease new cable and thread through shift lever and hole in bottom bracket or chainstay. Cable will exit at dropout (F). A slight bend in the cable  $\frac{1}{2}$ " from the end, and rotating the cable will aid insertion. Install rear cable housing. Install cable to rear derailleur clamp bolt. Check for proper shifting of rear derailleur.

## Component Systems

### The Brake System

#### Brake Cable Installation

Slide ferrule onto bare end of brake cable towards leaded cable end, followed by cable housing after applying grease to the cable (Figure 9).

Pull back rubber cover with your fingers and insert leaded cable end through rubber cover and lever bracket. Make sure ferrule is properly seated into the lever bracket.

Next, rotate pull-up stud so large hole faces the leaded cable end, with the slot in pull-up stud facing upward. Carefully push leaded cable end under the larger hole in the pull-up stud. As cable is being pushed under the pull-up stud, the stud should rotate so that the leaded cable end seats itself in the bottom of the

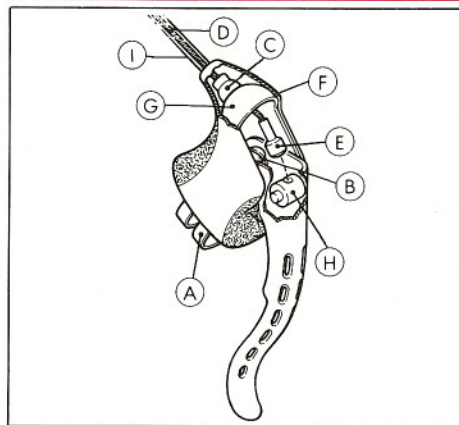


Figure 9. Brake Assembly

- |                      |                   |
|----------------------|-------------------|
| (A) Clamp band       | (F) Rubber cover  |
| (B) Clamp band screw | (G) Lever bracket |
| (C) Ferrule          | (H) Pull-up stud  |
| (D) Brake Cable      | (I) Cable housing |
| (E) Leaded cable end |                   |

NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES

**BUSINESS REPLY MAIL**

FIRST CLASS

PERMIT NO. 1263

BOULDER, CO 80321

POSTAGE WILL BE PAID BY ADDRESSEE

***Bicycle Guide***

P.O. BOX 52066

Boulder, CO 80321-2066





# BICYCLE GUIDE

9 Issues for ~~\$22.50~~

**\$9.95**

Pay only \$9.95 when you subscribe for 1 year of BICYCLE GUIDE! Save 56% off the cover price.

- ☐ Send me 1 year (9 issues) for only \$9.95  
☐ Payment enclosed – THANK YOU!  
☐ Please bill me.

Basic 1 year rate is \$14.90.

☐ MR.  
☐ MS.  
NAME ☐ MRS.

ADDRESS

CITY

STATE

ZIP

Overseas Subscriptions add \$5.00 (Payable in US\$).

Canadian Subscriptions add \$4.00.

Please allow 4-6 weeks for delivery.

79KM4

## Component Systems

pull-up stud. The cable is now secured in the large hole of the pull-up stud.

Thread cable and housing through cable guides to front and rear brakes. The right brake lever connects to the rear brake caliper and the left brake lever to the front brake caliper.

### Operation

The brake system consists of a lever, cable, and caliper for each wheel. Your bike is equipped with either caliper or cantilever brakes (Figures 10 and 11).

Do not ride your bicycle if you are not certain that both the front and the rear units are working properly. If you question the soundness of your brake system, take your bicycle to your Trek dealer.

When stopping, always apply the rear brake first. Avoid braking while turning,

or the bike may skid out of control. Also remember that any brakes are less effective in wet weather. Review the Before You Ride chapter for general safety checks.

### Adjustment

Make sure that the front ends of all four aluminum brake shoe holders are closed, so that the rubber brake shoes do not slide out when you apply the brakes. Squeeze the brakes and inspect the shoes to see if they touch the sides of the wheel rims completely and do not rub on the tires. If necessary, loosen the brake shoe anchor nuts and move the shoes until they are in the correct position. Retighten the anchor nuts firmly; the recommended torque is 50 in • lb.

## Component Systems

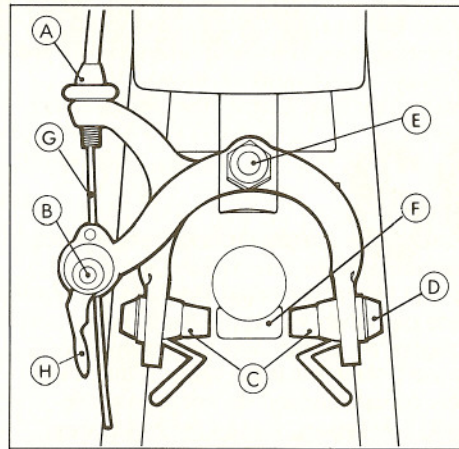


Figure 10. Caliper Brake

- |                            |                   |
|----------------------------|-------------------|
| (A) Cable adjusting barrel | (E) Pivot bolt    |
| (B) Cable anchor bolt      | (F) Rim           |
| (C) Brake shoes            | (G) Brake cable   |
| (D) Brake shoe anchor nut  | (H) Quick-release |

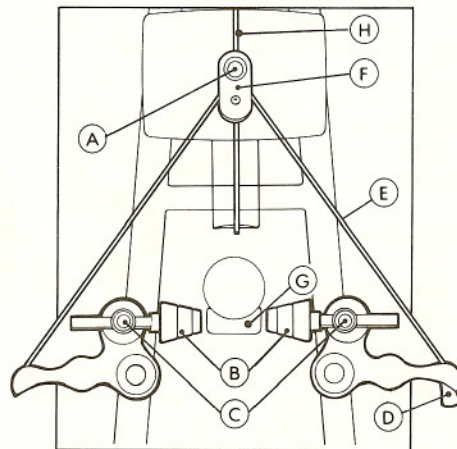


Figure 11. Cantilever Brake

- |                            |                    |
|----------------------------|--------------------|
| (A) Cable anchor bolt      | (E) Straddle cable |
| (B) Brake shoes            | (F) Cable carrier  |
| (C) Brake shoe anchor nuts | (G) Rim            |
| (D) Quick-release          | (H) Brake cable    |

## Component Systems

In normal riding position, each brake shoe should clear the rim by approximately  $\frac{1}{16}$ " to  $\frac{1}{8}$ " on each side. If the shoes are not this close, turn the cable adjusting barrel out until the desired clearance is achieved. Do not turn the adjusting barrel past the end of the threads. Tighten lock nut down on caliper arm.

If the brake cannot be adjusted this way, screw the adjusting barrel all the way down. Hold the brake shoes against the rim, loosen the cable anchor bolt, and pull the cable tight. Retighten the cable anchor bolt enough to prevent the cable from slipping when the brakes are applied. Be careful to not overtighten and strip the threads; the recommended torque is 30 in • lb. Test the brakes by

squeezing the lever as hard as possible several times, then check the brake adjustment as before.

### Cable Installation

Periodically check the cables for kinks, rust, broken strands, and frayed ends. Also check the housing for bent ends, crimped holes, stretched coils, and wear. If you see any of these things, replace the cable and/or housing as soon as possible.

First, loosen the brake cable anchor bolt and feed the cable out through the brake lever. Grease the new cable and reinstall, feeding it in along the same path. Make sure that the cable's lead end is seated properly in the brake lever body and that the housing and ferrule (the small aluminum fitting) are properly seated in the top portion of the lever.



## Component Systems

---

After threading the cable through the anchor bolt, follow the directions for adjustment above. Be sure to adjust the brakes so that they work properly when the brake quick release mechanism is in the closed or locked position. Finally, cut the cable so that no more than 3" extend beyond the anchor bolt; crimp a metal cap or place a bit of solder on its end to prevent fraying.

### Brake Shoe Installation

When brake shoes become noticeably worn or hard, they must be replaced. It is recommended that original equipment replacements are used whenever possible. Remove the old shoes with the appropriate wrench, put the new ones on, and align them so that they strike the rim completely. Make sure they don't touch the tire. You will need to readjust the cable to accommodate the difference in

pad width—shoes get thinner with wear. Always maintain the  $\frac{1}{16}$ " to  $\frac{1}{8}$ " clearance between the shoes and the rim.

## Wheels and Tires

### Quick Release Units

Your bicycle features quick release levers on the front and rear brakes and hubs. These levers allow you to remove and install wheels without deflating the tires or using tools. **Caution: Read this section carefully. If any of the release mechanisms are improperly adjusted or disengaged, the bicycle is unsafe to ride.**

## Component Systems

---


Front and rear brakes have separate quick release levers. To operate the quick release on a caliper brake arm, pull the quick release lever out and away from the frame. To reset the quick release lever, push it back toward the frame while squeezing the brake calipers lightly.

**Front Wheel Removal.** Disengage the front brake quick release lever and open the hub quick release skewer by pulling the skewer lever away from the wheel and turning it 180° toward the front of your bicycle (see Figure 13). Slip the wheel out of the fork.

**Front Wheel Installation.** Position the opened quick release lever so that it is on the left side of the bicycle and points toward the front. Next, guide the axle into


the fork slots, being careful not to knock the brake shoes loose. After making sure the axle is inserted all the way into the slots, center the wheel between the fork blades. Tighten or loosen the adjusting nut opposite the lever until you can easily turn the lever about half way back to the closed position, or until it is parallel to the axle. Push the lever all the way to the rear to lock the wheel securely in place. *Test the lever.* If you can rotate the lever up and down, it is too loose. Reopen the quick release lever and tighten the adjusting nut until you can't rotate the lever up and down in the closed position. Reengage the brake quick release lever. Squeeze the brakes tightly a few times and check for proper adjustments.

## Component Systems

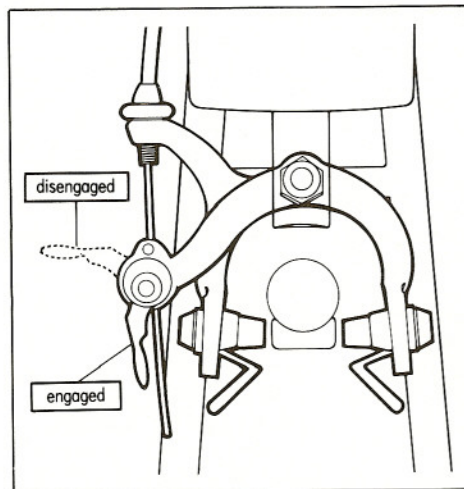

**Figure 12. Brake Caliper Equipped with Brake Quick Release Lever**

**Caution:** Be sure that hub and quick release lever is firmly in the engaged

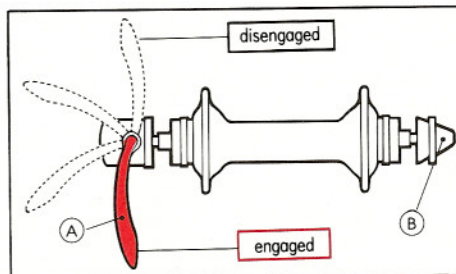

**Figure 13. Hub Quick Release**

**A** Skewer lever      **B** Adjusting nut  
position, and that wheel is firmly locked into the frame before riding.

It is the owners responsibility to follow the instructions on the use of the Q.R. hub(s). Once the Q.R. skewer has been installed by an authorized Trek dealer and delivered to the owner it becomes the responsibility of the owner to remove and install the wheel properly. *The owner must check the Q.R. skewer to make sure it is secure.*

## Component Systems

**Rear Wheel Removal.** Shift the chain onto the smallest rear sprocket. Disengage the brake quick release lever and pull the quick release lever located on the rear hub away from the wheel and turn it 180° toward the front of your bicycle. Pull the derailleur back and up for clearance. Remove the rear wheel.

**Rear Wheel Installation.** Position the opened quick release lever so that it points to the front of your bicycle and shift the rear derailleur to the smallest rear sprocket. Pivot the derailleur to the rear and position the wheel between the rear chainstays. Guide the chain onto the smallest rear sprocket. Slide the wheel into the rear dropouts, release the derailleur, and center the wheel in the frame. Next, tighten or loosen the adjusting nut opposite the lever until you can easily turn the lever about half way

back to the closed position, so that the lever is parallel to the axle. Push the lever all the way to the rear to lock the wheel securely in place. Finally, *test the lever.* It is too loose if you can rotate it up and down; reopen the lever and tighten the adjusting nut as described under Front Wheel Installation, then reengage the brake quick release lever and test your brakes. **Caution:** Make sure your wheels are centered and spin freely without grabbing or rubbing against your brake shoes.

### Wheel Inspection

The integrity of your bicycle wheels is crucial. Their structural soundness and their relationship to the performance of your brakes are of great importance. The best maintenance for a wheel is preventive maintenance. If you are aware of the things that *can* go wrong, you may be able to stop trouble before it happens.



## Component Systems

---

Watch for these potential problems:

**Dirty Rims.** Dirty or greasy rims render your brakes ineffective. Wipe your rims with a clean rag or wash them with soap and water, rinse, and let them air dry. When lubricating your bike, be sure not to get oil on the braking surfaces.

**Wheels Out of Round.** Bicycle wheels must withstand the great force and weight demanded of them by a cyclist, and the spokes need to be tightened to the correct tension for your wheels to be both round and centered within the bicycle frame. Because wheel truing is a complicated procedure, we recommend that you do not attempt it without training or the supervision of an expert. If you find yourself in an emergency situation and must adjust or replace a spoke yourself, keep in mind that loosening a spoke

radiating from one side of the hub will move the rim toward the other side. Conversely, if you tighten a spoke, the rim will move toward the side of the hub to which the spoke is attached. If a spoke attached to the right side of the rear hub breaks, you will need to remove the freewheel; refer to the Appendix for this operation.

Inspect your wheels frequently to make sure that there are no loose, damaged, or broken spokes. To inspect the wheel for straightness, spin the wheel, while it is still attached to the frame or fork. Compare the distance from the rim to the brake pads. If the rim appears to move up or down, or from side to side more than a few millimeters, or if it rubs the brake pad on and off as it spins, the wheel needs adjustment. *Remember: If a wheel*

## Component Systems

---

*is not properly adjusted and in good condition, both the effectiveness of the brakes and the strength of the wheel are greatly reduced.*

**Play in the Hub.** After satisfying yourself that the hub quick release units are engaged properly, check the play in the hub by attempting to move the wheel to the left and right. If there is play between the axle and the hub, an adjustment should be made. This procedure is explained in the Appendix.

### Tire Inspection

Keep your tires inflated to the pressure molded on the tire sidewalls. Use a gauge and a bicycle pump whenever possible. Avoid filling your tires at gas stations; because of the greater pressure and volume of air their pumps release, blowouts are very possible. When you fill your tires, check to see that each tire is properly seated in the rim and that there

are no defects on its surface. If a tire shows signs of dry rot, excessive wear, or if it is badly cut, replace it as soon as possible. This procedure is described in the Appendix.

### Valves

Your bicycle tubes have *Presta valves*. To inflate a tire, remove the protective valve cap and turn the small valve lock nut counterclockwise as far as it will go. The tube will then accept air. After inflating the tire, turn the lock nut clockwise all the way and replace the cap. If you would like to use a pump designed for Schraeder or car-type valves, adapters can be purchased at your Trek dealership. Do not attempt to install a Schraeder valve tube, nor attempt to modify the rim to accept a Schraeder valve.

*Caution: Enlarging the valve hole on a Presta valve rim can dangerously weaken the wheel.*

# Bicycle Care

## Maintenance

Keeping your bicycle properly maintained is extremely important. Use the following maintenance schedule as a guide to complete care. You can do many of these operations yourself, but

we recommend an expert do the more technical tune-up work. If you have questions about how to care for your bike, please feel free to ask your Trek dealer.

## Bicycle Care Checklist

Each Time You Ride	<input type="checkbox"/>	Follow safety information provided on page 4 titled: Before You Ride.
Weekly	<input type="checkbox"/>	Wipe off your bicycle with a damp rag.
	<input type="checkbox"/>	Check tire pressure.
	<input type="checkbox"/>	Check brakes.
Monthly	<input type="checkbox"/>	Oil cable, chain and pivot points (brake levers and calipers, shift levers, derailleurs) with a light bicycle lubricant. Avoid heavy oils that evaporate and leave a gummy residue. Remove excess oil to avoid dirt buildup.
	<input type="checkbox"/>	Tighten all loose nuts and bolts.

# Bicycle Care

## Bicycle Care Checklist (Cont.)

Every 3 Months	<input type="checkbox"/>	Check wheels and have the bicycle shop true them if necessary.
	<input type="checkbox"/>	Replace brake shoes if they are worn down past the grooves.
	<input type="checkbox"/>	Clean chain, derailleurs, and other greasy parts with a brush and kerosene and then relubricate.
	<input type="checkbox"/>	Check gear adjustment, especially on indexed shifting systems.
	<input type="checkbox"/>	Clean and wax finish.
Every Year	<input type="checkbox"/>	Clean all bearings in the hubs, bottom bracket, and headset. Repack bearings with grease. Oil or grease pedal bearings.
	<input type="checkbox"/>	Replace frayed cables.
	<input type="checkbox"/>	Replace tires if they are split or if cord can be seen anywhere.

This maintenance schedule is based on normal usage. If you ride your bike more than average or in rain or snow

conditions, you will want to go over your bicycle more often than the schedule suggests. If any part appears to be



## Bicycle Care

---

malfunctioning, check and adjust it immediately if you can do so yourself, or consult your Trek dealer. Never ride any bicycle that is not operating properly.

### Storage

Improper storage is very hard on a bicycle. Before storing your bike, clean, lubricate, and wax it. Hang the bicycle off the ground, with the tires at approximately half pressure. Do not store near electric motors (ozone destroys rubber and paint). Before riding the bicycle again, be certain it is in good working order.

### Security

The greatest risk you may face with your bicycle is having it stolen. Take every precaution you can:

1. Keep a record of the serial number in a safe place.

2. Register the bicycle with your local police.
3. Purchase a lock from a manufacturer that guarantees its absolute effectiveness against bolt cutters and saws.
4. Use your lock. *Never*—not even for a minute—leave your bicycle unlocked.

## Maintenance of the TREK Bonded Framesets

---

Aluminum and composite bonding is by far the most exciting advancement in bicycle design and construction in decades. Lightweight and strong, TREK bonded bikes feature heat-treated aluminum alloys, exotic composites, epoxy adhesives and the most advanced design available. But because these have different properties than conventional bikes, TREK bonded bikes are assembled by your dealer according to factory specifications. Owner maintenance of a bonded-frame bicycle *also* requires special procedures to reduce the risk of damage.

**General Procedures** • Do not bend or twist aluminum frame parts to make adjustments. Heat-treated aluminum alloys are not as ductile as steel. • Do not *force to fit* when replacing or repairing a part on an aluminum frameset because tolerances for press and thread fits are

more critical than on steel. To avoid frame damage, any press fit should be done by the dealer. • Avoid over-torquing a threaded fastener or you may ruin threads and cause frame damage.

**Frame Alignment** Every TREK bonded frameset comes from the factory perfectly aligned and retains its original strength and resiliency throughout the adhesive bonding process. No additional heat treating is required, so the frameset remains perfectly aligned and strong. If your frameset becomes damaged in use, do not attempt to realign it yourself. Contact your TREK dealer for service.

**Seat Post and Binder Bolt** If it is necessary to change or adjust the seat post on your TREK aluminum bicycle, loosen or tighten the binder bolt by turning the fastener part with the external thread at a torque not exceeding 100 in.

lbs. Use a 5mm or 4 mm allen key. Lubricate all mating surfaces and parts well to prevent seizing.

**Front Derailleur Mount** The component used on TREK bonded bicycles is designed to accept any standard braze-on-type front derailleur. Adjust the front derailleur by loosening the attaching bolt and moving the derailleur in the slot. NEVER bend the mount because it may cause frame damage.

**Headset** The head tube on TREK aluminum bicycles accepts a 30.2mm O.D. bearing race and the fork accepts a 26.4mm I.D. bearing race. Do not press fit at more than 0.1 mm or damage could result. If the headset needs replacement, take it to a TREK dealer for service.

**Cleaning and Repairs** • Use a soft rag and mild detergent in water to remove

road film. DO NOT use solvents or harsh chemicals on frame parts. • In most cases, a damaged frame *can* and *should* be repaired at the TREK factory. Contact your TREK dealer for service.

1.) Carbon fiber tubes are not as damage tolerant as steel or aluminum tubes. Avoid scratching or gouging them. If the polyurethane clear coat becomes damaged repair it with a clear enamel. Maintain the finish with a good non-abrasive car wax.

2.) The seat stays, brake bridge, and chainstays are anodized aluminum. Maintain their finish with clear water or mild detergent solution.

3.) The fork and lugs are polished aluminum. Maintain their finish with aluminum polish or a good non abrasive car wax.

# Appendix

## Clincher Tire Repair/Replacement

Follow the steps below when you need to replace a tube or tire. Your Trek dealer will be glad to help you if you need assistance.

1. Remove the wheel from the bicycle. Review the section on Quick Release Units in the Component Systems chapter.
2. Open the valve and, holding it open, squeeze out air to completely deflate the tire.
3. By pushing inward, loosen the tire bead from the rim all the way around.
4. Pry one side of the tire bead up over the edge of the rim. *Note:* Use tire tools or other smooth-ended tools. Don't use a screwdriver—you may damage the tire and tube.

5. Remove the tube, leaving the tire on the rim.
6. Locate any leaks and patch according to the instructions in the patch kit or replace the tube if necessary.
7. Match the tube with the wheel to possibly locate the cause of the puncture in the tire. Mark the location.
8. Remove the tire from the rim and check it to determine the cause; a nail or piece of glass may still be in the tire. inspect the whole tire and rim for damage. Correct or replace before reinstalling the tire.
9. Remount one side of the tire on the rim.
10. With a hand pump, put enough air in the tube to give it some shape.



## Appendix

---

11. Put the valve stem through the hole in the rim and work the tube into the tire. Do not let it twist.
  12. Without using tools, push the second side of the tire on the rim. Start in one spot and work in both directions. You may have to stop and let some air out of the tube.
  13. To get the last few inches on the rim, keep tight pressure on the tire to slide it over the rim with the palm of one hand. Using tools is a great temptation, but avoid them. They can damage the tire, break the wire bead, and puncture the tube. If you cannot get the tire on without using tools, take it to your Trek dealer.
  14. Check that the tube is not caught between the tire bead and the rim at any point.
  15. Inflate the tire to 25 pounds and check the tire for proper seating. Make sure that the tire bead sits in the rim to the same depth at all points. If properly seated, inflate to the pressure stamped on the side of the tire.
  16. Reinstall the wheel, check gears, brakes, and quick release levers.
- ### Mounting Sew-up Tires
1. Clean any old glue from the rim with a solvent such as naphtha or lacquer thinner. Dry the rim.
  2. For easier mounting, stretch the new tire by looping it under your foot and pulling up firmly with both hands.
  3. Apply a moderate layer of sew-up mounting glue evenly over the rims and back of the tire. Allow to set-up and then apply a second layer.

## Appendix

---

4. Insert the valve into the rim and slowly pull the tire onto the rim. You may need to anchor the wheel between your feet, valve side down, while pulling the tire up and sliding it on the rim with both hands.
5. When the tire is completely mounted, add 40 pounds of air. Center the tread on the rim so that it tracks straight and evenly.
6. Inflate the tire to full pressure and recheck alignment. If the tread becomes uneven, deflate to 40 pounds and restraighten.
7. Wipe any excess glue off the rims and the tire sidewall.
8. Allow one day for setup before using.
9. Check to make sure that you cannot roll the tire off with your hands.

### The Freewheel

**Removal.** Removing the freewheel is necessary if you need to change a spoke that radiates from the right flange, to adjust the bearings, or to clean and lubricate the freewheel itself. Before trying to remove your freewheel, determine its type. Trek bicycles are equipped with either a cassette or a standard freewheel system.

To disassemble the cassette freewheel (see Figure 14), loosen and remove the outer sprocket with a special cog wrench and simply pull the cogs and spacers away from the hub. There is no need to remove the skewer.

## Appendix

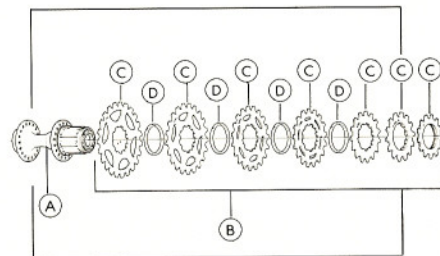


Figure 14. Cassette Illustration

- (A) Hub body
- (B) Freewheel
- (C) Cog 5
- (D) Spacers

To separate the standard-type freewheel from its hub (Figure 15), remove the skewer and place the freewheel tool on the freewheel so that its tangs fall into the notches in the freewheel body. Hold the tool in this position by inserting the

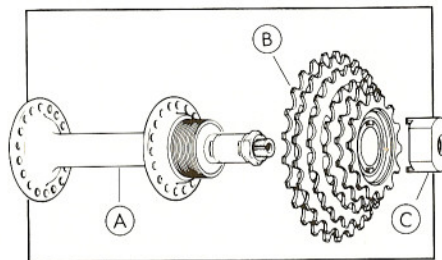


Figure 15. Standard Hub and Freewheel

- (A) Hub body
- (B) Freewheel
- (C) Freewheel tool

skewer through the opening in the tool and through the hub. Do not tighten the skewer more than necessary to prevent the freewheel tool from falling out of the freewheel notches. Secure the freewheel tool in a vise and

## Appendix

apply pressure counterclockwise until the wheel begins to turn. When you feel this initial movement, remove the skewer and unscrew the freewheel by turning the tool counterclockwise.

**Cleaning and Lubricating.** To clean the bearing surfaces, soak the freewheel overnight in a clean solvent such as kerosene and allow to air dry thoroughly. Lubricate the bearings by dripping a middle-weight bicycle oil into the freewheel body. Spin the freewheel so that the oil reaches all of the bearing surfaces. Do *not* disassemble the freewheel.

**Installation.** To reinstall a cassette freewheel, simply push the cogs and spacers back onto the hub and tighten the outer sprocket into place with the special cog wrench. You must be sure to replace these in the correct order and orientation they were in before removal. For the

standard type, grease the threads and screw the freewheel clockwise onto the hub until it is hand-tight and replace the quick release skewer.


### Bearing Adjustment

Cone adjustment may occasionally be needed on the headset, crank assembly, and hubs without sealed bearings. Poorly adjusted bearings can cause damage and be very unsafe. Your Trek dealer has the proper tools and expertise to make these adjustments for you. If you would like to do the work yourself, use the following basic guidelines.

**Headset.** Check excessive play in the headset by trying to rock the fork back and forth with one hand on either fork blade and the other on the handlebar stem. If you feel more than just a slightly discernable amount of play, the bearings are too loose. Check for insufficient play



## Appendix

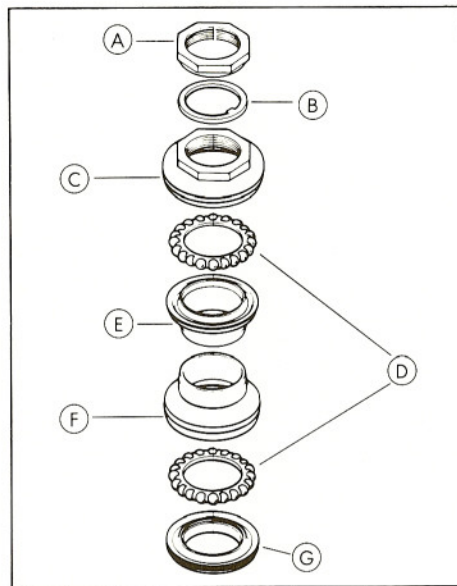

**Figure 16. Headset**

- |                        |                      |
|------------------------|----------------------|
| (A) Lock nut           | (E) Top head race    |
| (B) Lock washer        | (F) Bottom head race |
| (C) Adjusting cup/cone | (G) Crown race       |
| (D) Bearings           |                      |

by slowly pivoting the fork to the left and right; if the fork sticks or binds anywhere, the bearings are too tight.

To adjust the headset, loosen the lock nut (see Figure 16) and then tighten or loosen the adjusting cone until it is touching but not pressing on the bearings. Then back the adjusting cone off  $\frac{1}{8}$  to  $\frac{1}{4}$  of a turn. Retighten the lock nut (recommended torque is 100 in • lb) and check the adjustment.

**Crankset.** To check the crankset adjustment, shift the chain to the small chainring and the smallest freewheel sprocket. Remove the chain from the


## Appendix

**Figure 17. Crankset**

- |                    |                    |
|--------------------|--------------------|
| (A) Dust cover     | (H) Crankarm       |
| (B) Fixing bolt    | (I) Lockring       |
| (C) Washer         | (J) Adjustable cup |
| (D) Chainring bolt | (K) Bearing        |
| (E) Nut            | (L) Spindle        |
| (F) Chainring      | (M) Fixed cup      |
| (G) Spacer         |                    |

chainring and rest it on the bottom bracket. Set the crankset in motion and watch to see that it spins freely. If it comes to an abrupt stop, the bearings are too tight. To check for excessive play, grasp each crankarm and attempt to rock the crankset to the left and right sides of the bicycle. If you feel more than just a barely discernable amount of play, the crankset is too loose.

If an adjustment is necessary, loosen the lock nut (see Figure 17) and tighten or

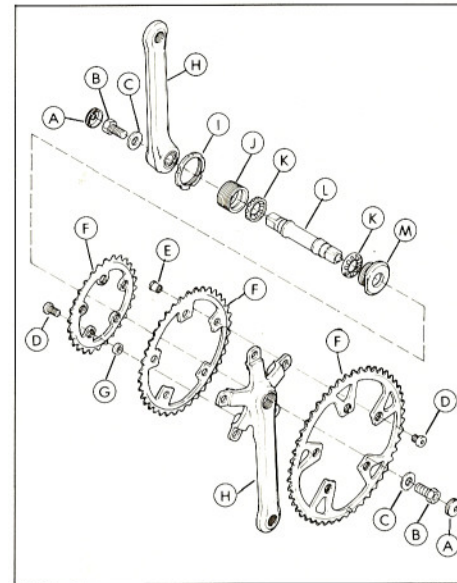

## Appendix

loosen the adjusting cup until it is touching but not binding the crank bearings. Then loosen the cup  $\frac{1}{8}$  to  $\frac{1}{4}$  of a turn and tighten the lock nut to 150 in • lb. Check your adjustment and remount the chain.

**Wheels.** Wheel bearings should be adjusted if the wheel does not spin freely or if there is a rocking motion when you move the wheel from side to side. If you are working with the rear wheel, you will need to remove the freewheel; refer to the preceding section for directions.

Before adjusting the cones, check to make sure that the lock nut opposite the side you are working on (see Figure 18) is tightened to the required pressure—70 in • lb. Then loosen the lock nut on the side you are working on and turn the cone until it touches but does not bind the bearings. Back the cone off  $\frac{1}{8}$  to  $\frac{1}{4}$

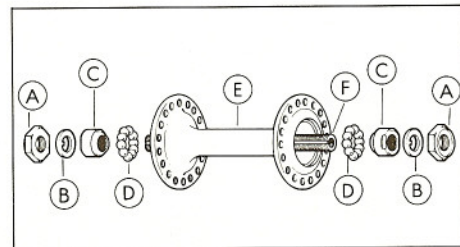


Figure 18. Hub Bearings

- |                 |              |
|-----------------|--------------|
| (A) Lock Nut    | (H) Bearings |
| (B) Lock Washer | (I) Hub body |
| (C) Cone        | (J) Axle     |

of a turn and tighten the lock nut to 70 in • lb. Check your adjustment.

## Appendix


27" Wheel Gear Chart (x 3.14 = inches traveled per one turn of the crank)

		Rear Freewheel Teeth																															
		12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32											
Front Chaining Teeth	24	54.0	49.8	46.3	43.2	40.5	38.1	36.0	34.1	32.4	30.9	29.5	28.2	27.0	25.9	24.9	24.0	23.1	22.3	21.6	20.9	20.3											
	25	56.2	51.9	48.2	45.0	42.2	39.7	37.5	35.6	33.8	32.1	30.7	29.3	28.1	27.0	26.0	25.0	24.1	23.3	22.5	21.8	21.1											
	26	58.5	54.0	50.1	46.8	43.9	41.3	39.0	36.9	35.1	33.4	31.9	30.5	29.2	28.1	27.0	26.0	25.1	24.2	23.4	22.6	21.9											
	27	60.8	56.1	52.1	48.6	45.5	42.9	40.5	38.4	36.5	34.7	33.1	31.7	30.4	29.2	28.0	27.0	26.0	25.1	24.3	23.5	22.8											
	28	63.0	58.2	54.0	50.4	47.3	44.5	42.0	39.8	37.8	36.0	34.4	32.9	31.5	30.2	29.1	28.0	27.0	26.1	25.2	24.4	23.6											
	29	64.2	60.2	55.9	52.2	48.9	46.1	43.5	41.2	39.2	37.3	35.6	34.0	32.6	31.3	30.1	29.0	28.0	27.0	26.1	25.3	24.5											
	30	67.5	62.3	57.9	54.0	50.6	47.6	45.0	42.6	40.5	38.6	36.8	35.2	33.8	32.4	31.2	30.0	28.9	27.9	27.0	26.1	25.3											
	31	69.7	64.3	59.8	55.8	52.3	49.2	46.5	44.1	41.9	39.9	38.0	36.4	34.9	33.5	32.2	31.0	29.9	28.9	27.9	27.0	26.2											
	32	72.0	66.5	61.7	57.6	54.0	50.8	48.0	45.5	43.2	41.1	39.3	37.6	36.0	34.6	33.2	32.0	30.9	29.8	28.8	27.9	27.0											
	33	74.3	68.5	63.6	59.4	55.7	52.4	49.5	46.9	44.6	42.4	40.5	38.7	37.1	35.6	34.3	33.0	31.8	30.7	29.7	28.7	27.8											
	34	76.5	70.6	65.6	61.2	57.4	54.0	51.0	48.3	45.9	43.7	41.7	39.9	38.2	36.7	35.3	34.0	32.8	31.7	30.6	29.6	28.7											
	35	78.7	72.7	67.5	63.0	59.1	55.6	52.5	49.7	47.3	45.0	43.0	41.1	39.4	37.8	36.3	35.0	33.8	32.6	31.5	30.5	29.5											
	36	81.0	74.8	69.4	64.8	60.8	57.2	54.0	51.2	48.6	46.3	44.2	42.3	40.5	38.9	37.4	36.0	34.7	33.5	32.4	31.4	30.4											
	37	83.2	76.8	71.4	66.6	62.4	58.8	55.5	52.6	50.0	47.6	45.4	43.4	41.6	40.0	38.4	37.0	35.7	34.4	33.3	32.2	31.2											
	38	85.5	78.9	73.3	68.4	64.1	60.4	57.0	54.0	51.3	48.9	46.6	44.6	42.7	41.0	39.5	38.0	36.6	35.4	34.2	33.1	32.1											
	39	87.8	81.0	75.2	70.2	65.8	61.9	58.5	55.4	52.7	50.1	47.9	45.8	43.9	42.1	40.5	39.0	37.6	36.3	35.1	34.0	32.9											
	40	90.0	83.1	77.1	72.0	67.5	63.5	60.0	56.8	54.0	51.4	49.1	47.0	45.0	43.2	41.5	40.0	38.6	37.2	36.0	34.8	33.8											
	41	92.2	85.2	79.1	73.8	69.2	65.1	61.5	58.3	55.4	52.7	50.3	48.1	46.1	44.3	42.6	41.0	39.5	38.2	36.9	35.7	34.6											
	42	94.5	87.2	81.0	75.6	70.9	66.7	63.0	59.7	56.7	54.0	51.5	49.3	47.3	45.4	43.6	42.0	40.5	39.1	37.8	36.6	35.4											
	43	96.7	89.3	82.9	77.4	72.6	68.3	64.5	61.1	58.1	55.3	52.8	50.5	48.4	46.4	44.7	43.0	41.5	40.0	38.7	37.5	36.3											
	44	99.0	91.4	84.9	79.2	74.3	69.9	66.0	62.5	59.4	56.6	54.0	51.7	49.5	47.5	45.7	44.0	42.4	41.0	39.6	38.3	37.1											
	45	101.3	93.5	86.8	81.0	75.9	71.5	67.5	63.9	60.8	57.9	55.2	52.8	50.6	48.6	46.7	45.0	43.4	41.9	40.5	39.2	38.0											
	46	103.5	95.5	88.7	82.8	77.6	73.1	69.0	65.4	62.1	59.1	56.5	54.0	51.7	49.7	47.8	46.0	44.4	42.8	41.4	40.1	38.8											
	47	105.7	97.6	90.6	84.6	79.3	74.6	70.5	66.8	63.5	60.4	57.7	55.2	52.9	50.8	48.8	47.0	45.3	43.8	42.3	40.9	39.6											
	48	108.0	99.7	92.6	86.4	81.0	76.2	72.0	68.2	64.9	61.7	58.9	56.3	54.0	51.8	49.8	48.0	46.3	44.7	43.2	41.8	40.5											
	49	110.2	101.8	94.5	88.2	82.9	77.8	73.5	69.6	66.2	63.0	60.1	57.5	55.1	52.9	50.9	49.0	47.3	45.6	44.1	42.7	41.3											
	50	112.5	103.8	96.4	90.0	84.4	79.4	75.0	71.1	67.5	64.3	61.4	58.7	56.2	54.0	51.9	50.0	48.2	46.6	45.0	43.5	42.2											
	51	114.8	105.9	98.4	91.8	86.1	81.0	76.5	72.5	68.9	65.6	62.6	59.9	57.4	55.1	53.0	51.0	49.2	47.5	45.9	44.4	43.0											
	52	117.0	108.0	100.3	93.6	87.8	82.6	78.0	73.9	70.2	66.9	63.8	61.0	58.5	56.2	54.0	52.0	50.1	48.4	46.8	45.3	43.9											
	53	119.3	110.0	102.2	95.4	89.4	84.1	79.5	75.3	71.5	68.1	65.0	62.2	59.6	57.2	55.0	53.0	51.1	49.3	47.7	46.2	44.7											



# Your Trek Frame Set

- (A) Top tube
- (B) Seat tube
- (C) Down tube
- (D) Brake bridge
- (E) Seatstay
- (F) Chainstay
- (G) Dropout
- (H) Bottom bracket
- (I) Steerer tube
- (J) Head tube
- (K) Fork crown
- (L) Fork blade
- (M) Fork tip
- (N) Pump peg
- (O) Rack mounts
- (P) Cable guide

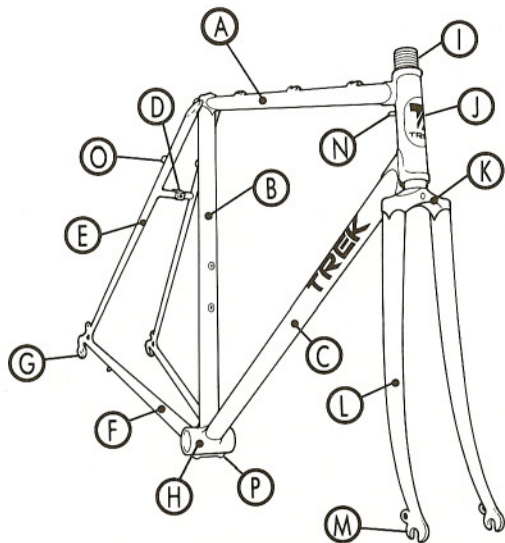

# Trek Bicycle Corporation Limited Warranty

Trek Bicycle Corporation warrants this new Trek bicycle frame and fork against defects in workmanship and materials for the lifetime of the original owner. Trek likewise warrants all original parts for a period of one year from the date of purchase. This warranty is expressly limited to the repair or replacement of a defective frame, fork, or part and is the sole remedy of the warranty.

Claims under this warranty are to be made through an authorized Trek dealer. Proof of purchase is required.

This warranty does not apply to damage or failure due to accident, abuse, neglect, normal wear and tear, improper assembly or maintenance, or installation of parts or accessories not originally intended or incompatible with the bicycle as sold.

Trek shall not be responsible for incidental or consequential damage. The user assumes the risk of any personal injury or damage of the bicycle or other losses if Trek bicycles are used at any time for stunt riding, dirt biking or similar activities, power or motor assist of any kind, competition riding, or anything other than normal use. This warranty gives you specific legal rights, and your rights may vary from state to state.

**BE SURE TO COMPLETE THE  
ATTACHED REGISTRATION FORM  
TO ACTIVATE YOUR TREK WARRANTY.**